

ULM-SERIES INSTALLATION INSTRUCTIONS

Job Name:


Address:

CAUTION: ULM SERIES are not compatible with all LED Drivers/Transformers. Do not connect to 12V AC/DC power supplies. Must use factory recommended Constant Current LED Drivers to power system.

Option A Wiring - ULA Adapters



ULA-CON-3
3 Port Adapter

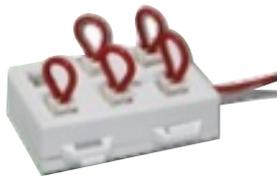


ULA-CON-6
6 Port Adapter

ULA Adapters provide an easy series wiring connection.

Option B Wiring - Manual Series Wiring

Wiring multiple ULM LED fixtures in Series. Please follow diagram below to create a series wiring connection to meet minimum load.

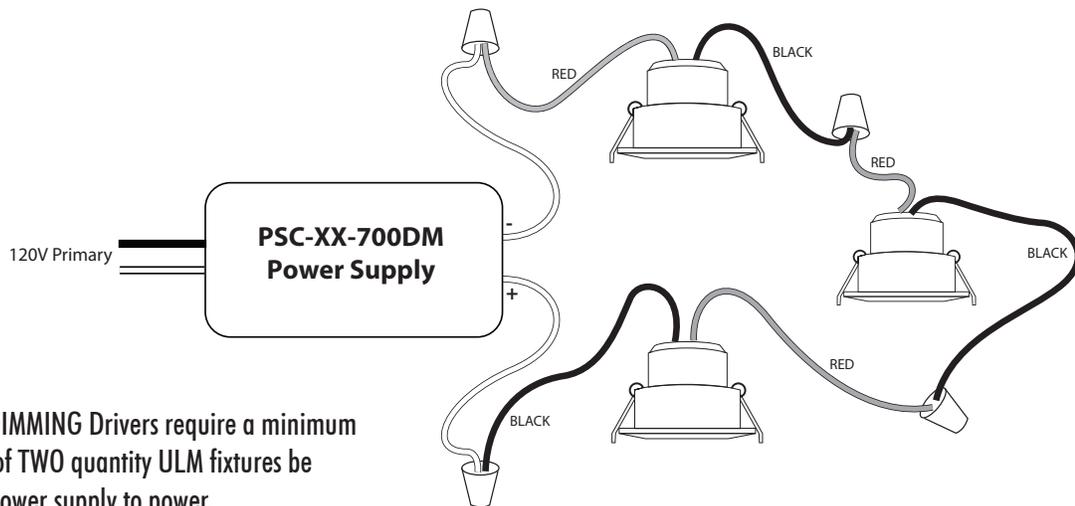

Note:

Constant Current DIMMING Drivers require a minimum load. A minimum of TWO quantity ULM fixtures be connected to PSC power supply to power.