


**OPERATION GUIDE**



**DIMENSIONS**

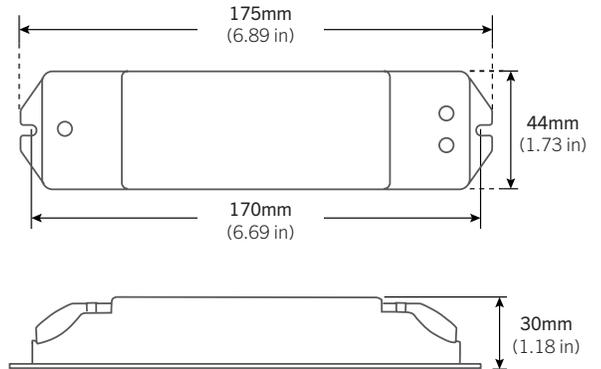

**BEFORE OPERATING**



DOWNLOAD THE APP

Receiver must be paired with a compatible controller. See options below.

Compatible DMX Controllers: RGB CT-820 | RGB CT-840 | RGB CT-850

Do not wire the DMX output of the Controller with the DMX input of the Receiver.

**ASSIGNING MULTIPLE ZONES**

COMPATIBLE WITH RGB CT-820 | RGB CT-840 | RGB CT-850

STEP 1

Using your smartphone, locate the L7Etech App.  
Open the app. (Figure 1)

STEP 2

On the top right of the screen, select the "+" to add a new device. (Figure 2)

STEP 3





Select "Smart Light" from the list of options along the side of the screen.  
Select the type of lighting (based on the Tape Light or Fixture that you are using) from the list of options. (Figure 3)

STEP 4

A screen will appear asking to search via Bluetooth. Give approval and your receiver should appear with the option to "Add Manually".  
Select "Add Manually". (Figure 4)

STEP 5

Appropriately name your receiver device.  
Select the device type based on the type of lighting.  
Choose the location of your receiver. (Figure 5)

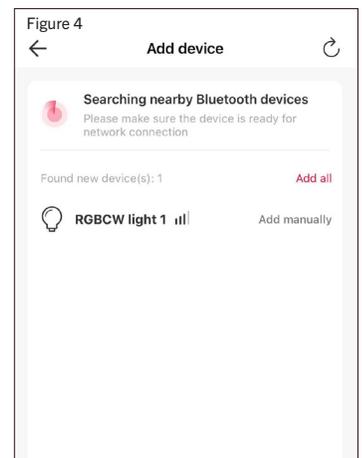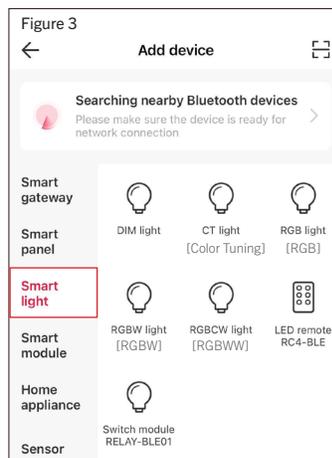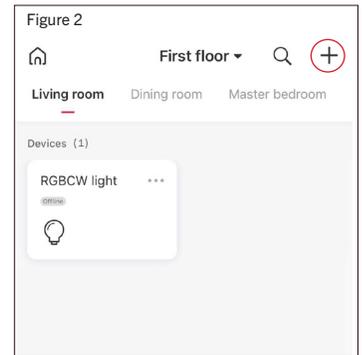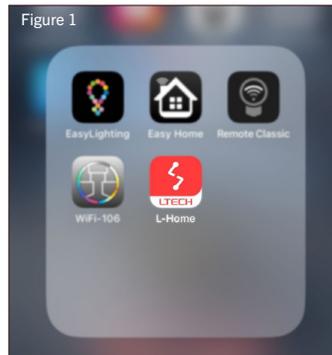

**ASSIGNING MULTIPLE ZONES (CONT.)**

STEP 6

Repeat steps 2 through 5 to add your chosen compatible controller and other receivers. Once connected, you should have both devices listed on your app home screen. (Figure 6)

STEP 7





To choose which receiver goes to which zone, select "Controller" on the home screen.

STEP 8

Locate "Zone 1" at the very bottom of your screen and select the "..." option. (Figure 7)

STEP 9

Select which receiver will be assigned to "Zone 1". (Figure 8A)  
When it has been successfully paired, the name of the zone should change to match the name of your selected receiver. (Figure 8B)

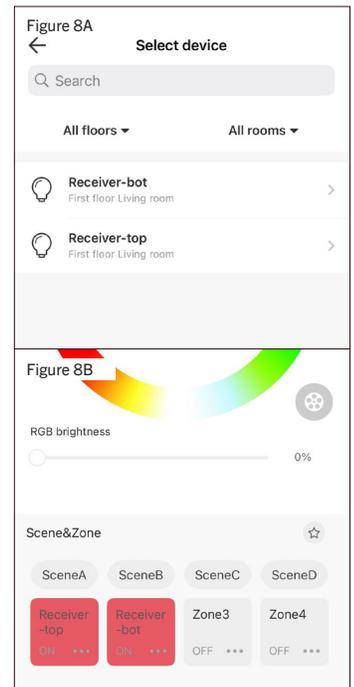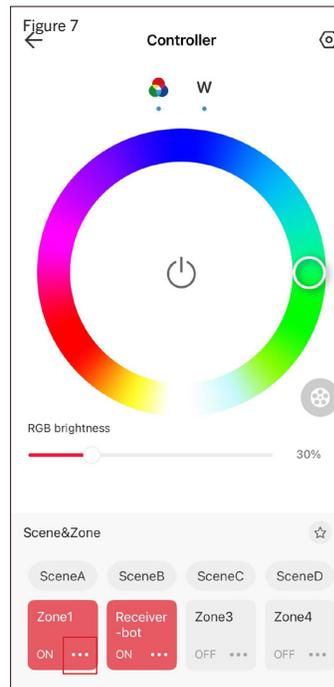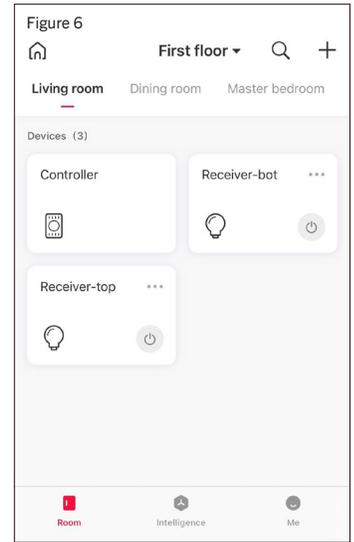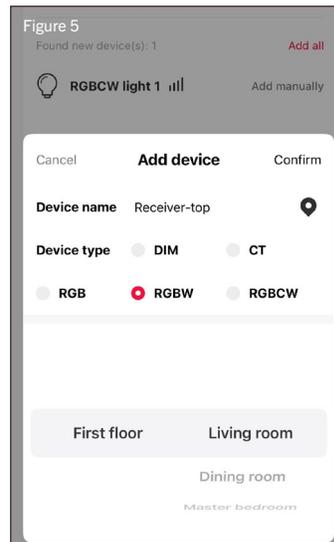

## ASSIGNING MULTIPLE SCENES

COMPATIBLE WITH RGB CT-820 | RGB CT-840 | RGB CT-850

### BEFORE ASSIGNING SCENES:

**Make sure that your controller and receiver have been properly paired.**

If your controller and receiver have not been paired, please follow steps 1-5 of the "Assigning Multiple Zones Guide".

STEP 1

Using your smartphone, locate the LTech App.  
Open the app. (Figure 1)

STEP 2

Select Controller on the home screen of the LTech App.  
(Figure 2)

STEP 3

Select one color on the color wheel or select the light grey wheel on the right to choose a default pre-programmed scene.  
(Figure 3A)  
If choosing a default scene, scroll and select from the available list presented on your screen. (Figure 3B)

STEP 4

Once you have selected your color or default scene, tap the star icon located in the "Scene & Zone" section. (Figure 4)

*\*Only one single color or default scene can be saved per scene.*

STEP 5

Select which scene label you'd like to save your selected color or default pre-programmed scene as. Once you have chosen your label, select SAVE on the top right of the screen. (Figure 5)

