



INSTALLATION GUIDE



DIMENSIONS

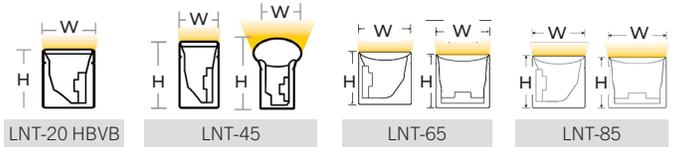

| MODEL | WIDTH | HEIGHT |
|------------------|--------|--------|
| LNT-20 HBVB | 10mm | 10mm |
| LNT-45 (F) | 11.5mm | 21mm |
| LNT-45 (D) | 11.5mm | 29mm |
| LNT-65 (HB VB) | 16mm | 17mm |
| LNT-85 (HB) | 22mm | 22mm |
| LNT-85 (VB) | 22mm | 19mm |

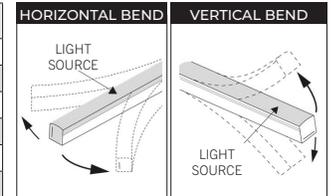

PRE-INSTALLATION

Surface Mount

Disconnect power source prior to installation.

- It is recommended to install with more than one person.
- Use only with a Class 2 Power Unit.

SAFETY

Read all instructions before installation.

These products may represent a possible shock or fire hazard if improperly installed.

Do not install less than 6 inches from a combustible material.

- ⚠ Product should be installed by a qualified electrician.
- ⚠ Product should be installed in accordance with these instructions and current electrical codes.
- ⚠ IP67 / IP68 is not Field Cuttable
- ⚠ Must be installed with CORE Lighting Drivers
- ⚠ Product is 24V. Do not connect to 120V power source.

INSTALLATION

- STEP 1** Determine the layout and mark the pattern onto the intended surface
-
- STEP 2** Align the spring clips to the mounting holes in the channel and place mounting channel to the surface. Use a level to make sure the channel is straight. Place a mounting bracket minimum every 8" (LNT-AC2).
** The number of brackets may vary depending on your pattern.*
-
- STEP 3** Secure channel to the surface by tightening all the provided screws; starting at the power input end. Make sure to keep a distance between the power input and channel.
**If mounting to a non-wood surface, it is recommended to use proper hardware.*
-
- STEP 4** Secure the LNT Series Neon into place by carefully pushing the light strip onto the channel or mounting brackets.
**Please do not bend product beyond factory recommendation. (Refer to product spec sheet for factory bending limits.)*
-
- STEP 5** Connect the LED supply wires to the source wires. Match the polarity.

