


## INSTALLATION GUIDE | SURFACE




**WARNING: RISK OF ELECTRICAL SHOCK**  
 \* turn off main power prior to installation  
 \* make sure hands are dry  
 \* never touch exposed wires

### 1 RUN 120V WIRE THROUGH CEILING



120V WIRE

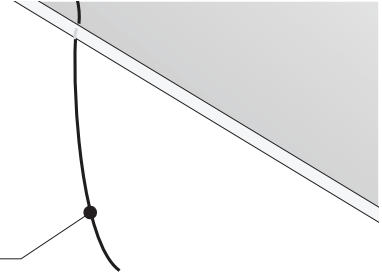

### 2 REMOVE DIFFUSER AND LED CARRIER TRAY

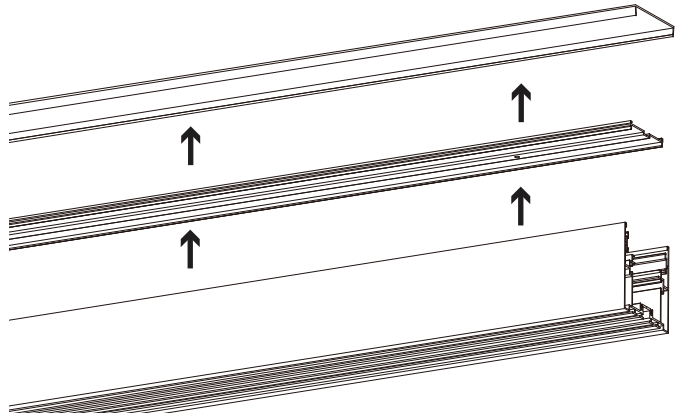


### 3 DRILL THREE (3) HOLES INTO THE PROFILE REFER TO DIAGRAM FOR HOLE SPACING

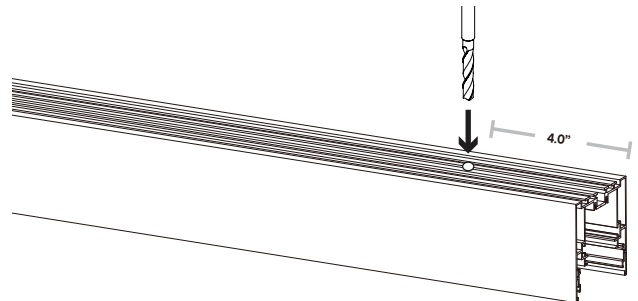


## INSTALLATION GUIDE


- 4** DRILL THREE (3) HOLES INTO CEILING TO MATCH HOLES ON PROFILE, THEN INSERT ANCHORS INTO THE HOLES.

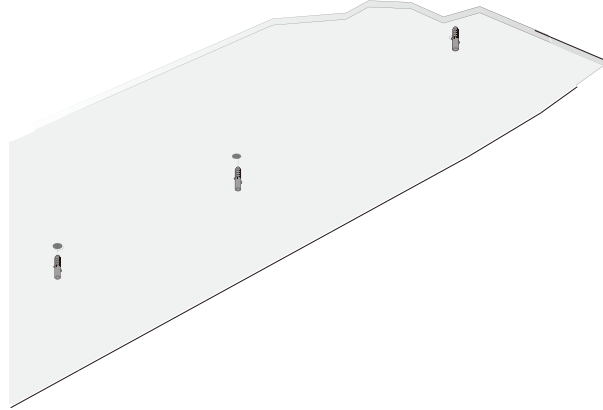

- 5** RUN WIRES THROUGH HOLES INTO PROFILE, THEN POSITION PROFILE ON THE CEILING. SCREW THE PROFILE SECURELY ONTO THE CEILING, THEN CONNECT WIRE TO POWER SUPPLY.

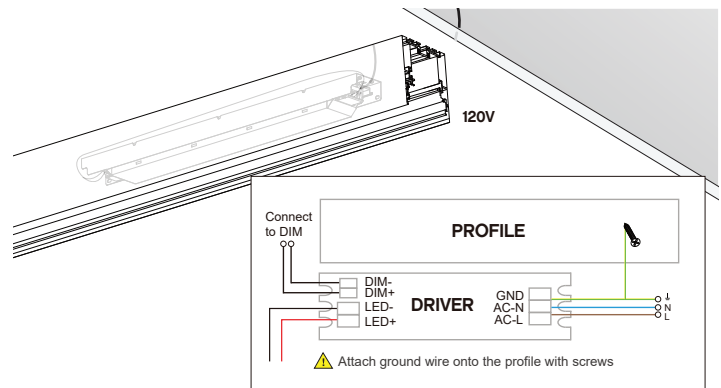


- 6** SNAP CARRIER TRAY WITH LED STRIP ONTO PROFILE

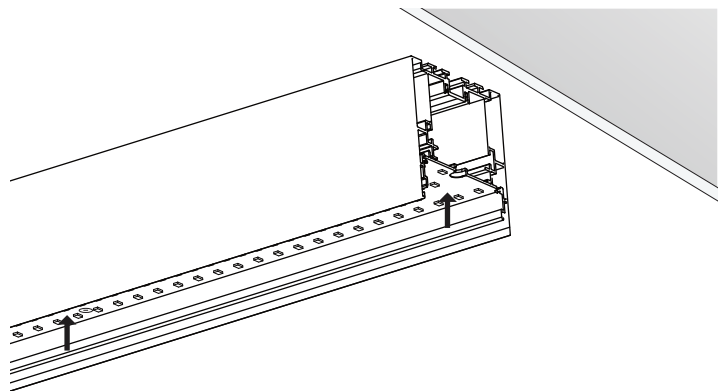

## INSTALLATION GUIDE

### 7 INSTALL DIFFUSER ONTO PROFILE

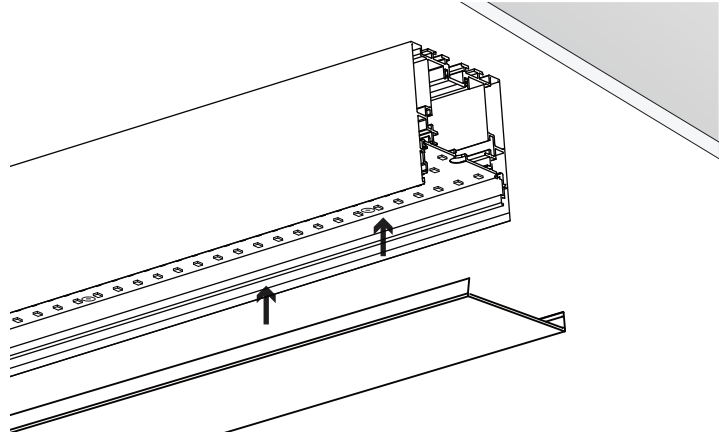

### 8 FINISHED

