INSTALLATION GUIDE










PRE-INSTALLATION

Trimless Mount

Disconnect power source prior to installation.

DIMENSIONS

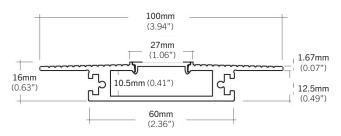

* ALP-2100TL used as an example for this guide.

SAFETY

Read all instructions before installation.

These products may represent a possible shock or fire hazard if improperly installed.

Do not look directly into light.

This fixture is only suitable for indoor installation.




Product should be installed by a qualified electrician.



Product should be installed in accordance with these instructions and current electrical codes.

INSTALLATION

Measure cutout and mark drywall where channel will be STEP 1 mounted. STEP 2 Cut channel to desired length. Mount/ Install ALP-2000 Series profile onto drywall. Drill and countersink channel with screws. * Make sure all screw heads are flush with the channel surface. STEP 3 *To prevent damage to the channel, factory recommends only drilling into the flange. DO NOT drill into the center of the channel. Before applying plaster to the edges, use drywall tape along the edges to avoid the plaster from cracking after installation. Apply plaster to the edges and finish with sand and paint. STEP 4 * Make sure that the drywall tapes do not overlap.

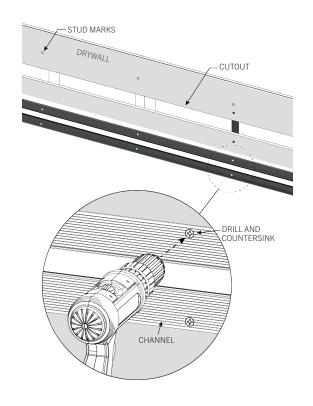



ALP-2000 SERIES

TRIMLESS RECESSED MOUNT LED PROFILE

INSTALLATION (CONT.)

Peel the adhesive backing of the LED strip and install onto the channel on the parts illustrated in the illustration.

STEP 5 *LED strips can be installed in either or both positions indicated.

Make sure that the LED strip is laid evenly flat on the channel. This will avoid having any dark spots once lit up.

STEP 6

Push the diffuser cover in place.

